


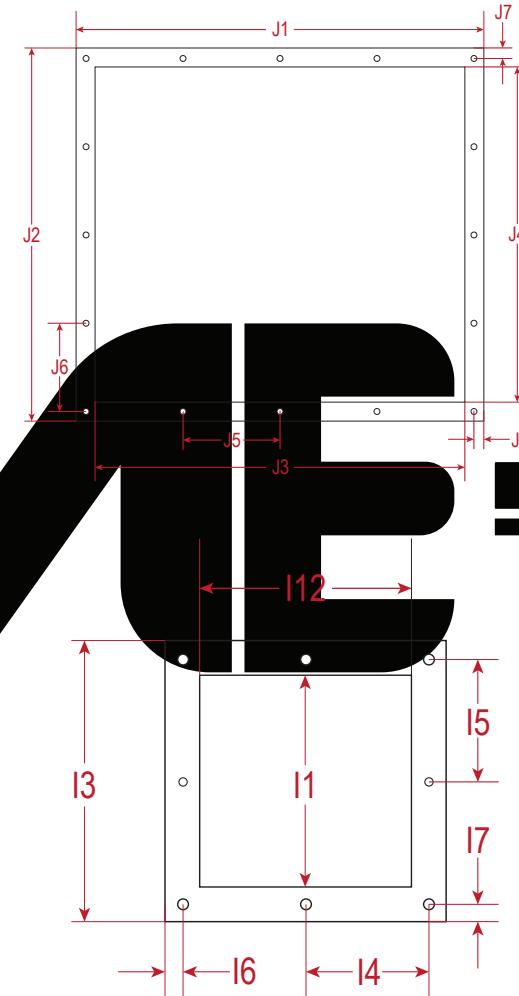

DIMENSIONES DE LA BRIDA DE LA VALVULA DE DESCARGA (PULGADAS)

115	16 ³ / ₄	16 ³ / ₄	13 ³ / ₄	13 ³ / ₄	5 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂
140	17 ¹ / ₄	17 ¹ / ₄	14 ¹ / ₄	14 ¹ / ₄	5 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂
160	23 ⁵ / ₈	23 ⁵ / ₈	19 ¹¹ / ₁₆	19 ¹¹ / ₁₆	7 ¹ / ₂	7 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂
200	29	29	25	25	9 ² / ₈	9 ¹ / ₄	5 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂
270	21 ¹ / ₂	27 ¹ / ₂	19 ¹ / ₂	23 ⁵ / ₈	6 ³ / ₄	8 ⁵ / ₈	5 ¹ / ₂	5 ¹ / ₂	5 ¹ / ₂

BRIDA DE SALIDA
DE LA VALVULA



DIMENSIONES DE LA BRIDA DE ENTRADA/SALIDA (PULGADAS)

115	5 ⁴ / ₈	5 ⁴ / ₈	10	4 ¹ / ₄	4 ¹ / ₄	3/4	3/4	5 ³ / ₄	
140	7	7	10	4 ¹ / ₄	4 ¹ / ₄	3/4	3/4	5	
160	8	8	12	5 ¹ / ₄	5 ¹ / ₄	3/4	3/4	6	
200	10	10	14	6 ¹ / ₄	6 ¹ / ₄	3/4	3/4	8	
270	13 ³ / ₄	13 ³ / ₄	18	5 ¹ / ₂	5 ¹ / ₂	3/4	3/4	9	

BRIDA DE ENTRADA
Y SALIDA

*La brida de entrada / salida del producto puede adaptarse a su sistema actual.